



INSTALLATION INSTRUCTIONS
EMFLX-M10003 Series (420-470 MHz)
3 dB UHF ROOF MOUNT ANTENNA

*Congratulations on your selection of another quality antenna product from E/M Wave.
 E/M Wave is committed to continually provide the greatest antenna VALUE for your wireless applications.*

1. Parts (Figure 1):

Verify all parts are included with the Antenna as shown in Figure 1.

- Antenna Whip
- e/m-Flex™ Poly Spring Assembly
- NMO Base Coil Adapter
- O-Ring

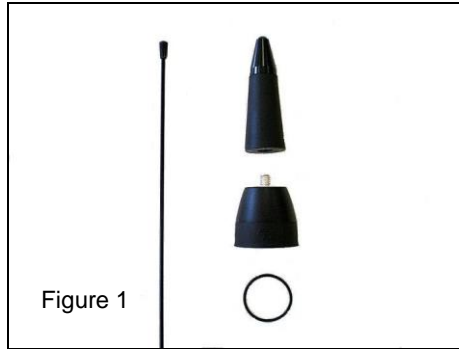


Figure 1

2. Tools:

- Tool for cutting stainless steel whip
- Hex Wrench (3/32")
- Note:** Special tools are not required to install the antenna. The antenna is intended to be installed using a firm hand torque until the sealing O-ring is completely compressed against the installation surface.

3. Pre-Installation (Figure 2):

- The EMFLX-M10003 is designed for installation to a standard NMO mount.
- Ensure O-ring is properly seated within O-ring groove as shown in Figure 2.
- Important:** Verify proper operational frequency is stamped on the base of the coil as shown in Figure 2.
- Read and follow all Whip Cutting Instructions supplied for this model.

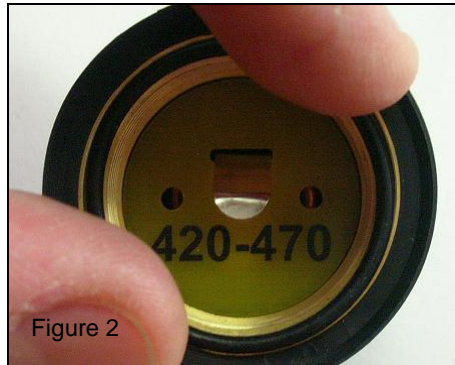


Figure 2

4. Tuning and Installation (Figure 3):

- Verify contact spring is completely extended. If necessary, adjust by pulling the contact outward. (Figure 3).
- Thread NMO Base Coil Adapter onto the vehicle NMO mount. Tighten by hand until O-Ring is completely seated.
- Thread Spring onto NMO Base Coil Adapter. Firmly torque by hand.
- Refer to EMFLX-M10003 whip cutting instructions. Cut whip to length according to desired frequency of operation.
- Verify VSWR. Apply firm torque to whip adapter set screws (2 ea.).

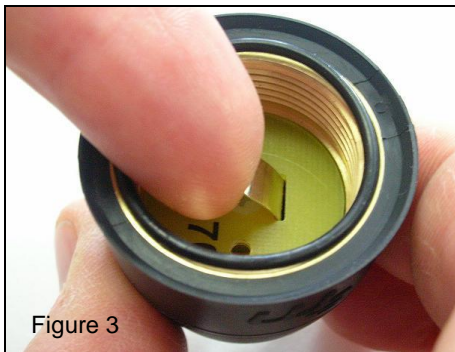


Figure 3

**WHIP CUTTING INSTRUCTIONS
 FOR TUNING EMFLX-M10003
 (420-470 MHz)**

**PLEASE CAREFULLY READ ALL
 INSTRUCTIONS BEFORE CUTTING
 THE WHIP.**

1. IMPORTANT: Before Cutting.

It is recommended to cut whip longer than the required dimension to verify actual performance. Then trim the whip in 1/16" (1.5mm) increments to fine tune the desired VSWR response.

CUTTING NOTE: The whip can be cut using a grinding wheel or shearing tool designed for this purpose.

2. NOTE: The Tuned Length "W" is

determined by measuring the distance between the top of the whip adapter and the top of the whip. **See Figure 4.** Cut length dimension will be approximately 1" (25mm) longer than Tuned Length "W".

3. Identify the desired center frequency of operation in the left column of Table 1. Imperial and Metric units are given for convenience.


4. TUNING NOTE: For frequencies not listed in Table 1, interpolation of Tuned Length "W" is permitted. When interpolating intermediate frequencies, the antenna frequency response increases by approximately 1 MHz for every 0.04" (1 mm) of cut length.

5. Cut the whip as required to establish the specified Tuned Length "W" as shown in Figure 4.

6. Verify VSWR. Secure set screws (2 ea.).

FREQUENCY	TUNED WHIP LENGTH "W"	
(MHz)	(inches)	(mm)
420	10-5/8	268
423	10-7/16	264
426	10-1/4	260
429	10-1/8	256
432	9-15/16	252
435	9-13/16	248
438	9-9/16	243
441	9-3/8	238
445	9-3/16	232
448	8-15/16	227
451	8-3/4	222
454	8-9/16	217
457	8-3/8	212
460	8-3/16	208
463	8-1/8	205
466	8	203
469	7-15/16	201
470	7-7/8	199

Table 1

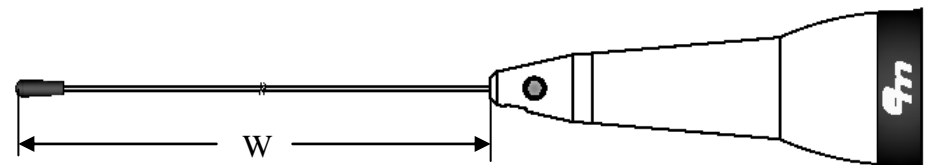

[Note: Add 1" (25mm) to Tuned Length "W" when cutting whip.]

Figure 4